Part Number: ATEX281 Publish date: July 2021

2-Wide Power/Controller Carrier

KJ4001X1-BA3 2-Wide Power/Controller Carrier

Hazardous Atmosphere



II 3G Ex ec IIC Gc FM16ATEX0056U FM21UKEX0017U



CL. I Div. 2 GP. A,B,C,D CL. I Zone 2 AEx/Ex ec IIC Gc FM17US0286U FM17CA0145U

Power Specifications

Input Power 30 VDC at 8 A

Environmental Specifications

Ambient -40°C to +70°C

Temperature

Shock 10g ½ Sinewave for 11msec

Vibration 1mm Peak to Peak from 2 to 13.2Hz;

0.7g from 13.2 to 150Hz

Airborne ISA-S71.04 –1985 Airborne Contaminants Class G3

Relative Humidity 5 to 95% Non-Condensing

Note: Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P2046 "DeltaV™ Scalable Process System Zone 2 Installation Instructions". Other installation instructions are available in the "DeltaV™ M-Series Hardware Installation and Reference" manual.

Removal and Insertion

This unit cannot be removed or inserted with system power energized. Power must be de-energized before disconnecting any carriers or LocalBus Extender cables.

A module cover (KJ4001X1-FA1) must be fitted to any permanently unoccupied location on a carrier. (Permanently unoccupied implies no system power supply or controller are intended for that location.)

No combination of I/O carriers and LocalBus Extenders must exceed a length of 6.5 meters. Interconnecting cable between enclosures must be in conduit.

Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

Other Safety Approvals



